

MODEL FSEX-HI
INSTALLATION AND SERVICE INSTRUCTIONS
FOR MODEL FSEX-HI
VISUAL SIGNAL APPLIANCES FOR
THE HEARING IMPAIRED
FOR USE IN HAZARDOUS LOCATIONS

Address all communications and shipments to:



**INSTALLATION AND SERVICE INSTRUCTIONS FOR MODEL FSEX-HI VISUAL SIGNAL
APPLIANCES FOR THE HEARING IMPAIRED
FOR USE IN HAZARDOUS LOCATIONS**



SAFETY MESSAGE TO INSTALLERS, USERS AND MAINTENANCE PERSONNEL

It is important to follow all instructions shipped with this product. This device is to be installed by a trained electrician who is thoroughly familiar with the National Electrical and Fire Codes and will follow all local codes.

This device should be considered a part of the warning system and not the entire warning system.

The selection of the mounting location for the device, its controls and the routing of the wiring is to be accomplished under the direction of the facilities engineer and the safety engineer. In addition, listed below are some other important safety instructions and precautions you should follow:

- Read and understand all instructions before installing or operating this equipment.
- Never alter the unit in any manner. Safety may be compromised if additional openings or other alterations are made to the unit.
- Do not connect this light to the system when power is on.
- After installation, ensure that the setscrew and threaded joints are properly tightened.
- Keep unit tightly closed when in operation.
- After testing is complete; provide a copy of this instruction sheet to all operating personnel.
- Establish a procedure to routinely check the light installation for integrity and proper operation.

Failure to follow all safety precautions and instructions may result in property damage, serious injury, or death to you or others.

I. GENERAL.

The Model FSEX-HI strobe light is a Visual Signaling Device for Hearing Impaired for use in Hazardous Locations and provides about 63 high intensity flashes per minute. The unit is UL Listed for indoor use on a wall or ceiling in a nonsleeping area and complies with the TYPE 4X (watertight and corrosion resistant) enclosure requirements and Marine Visual Signal Device (saltwater).

For the Electrical Ratings and Light Dispersion Pattern of the Model FSEX-HI, reference Table 1 and Figure 1.

This equipment is suitable for Class I, Division 1, Groups C and D; Class I, Division 2, Groups A, B, C and D, Class II, Division 1, Groups E, F and G; Class III and non-hazardous locations.



EXPLOSION HAZARD—Do not disconnect while circuit is live or unless the area is known to be free of ignitable concentrations.



EXPLOSION HAZARD—Substitution of components may impair suitability for Class I, Division 2. Keep tightly closed when in operation.

This device is intended for permanent installation and operation in accordance with Title 46, Code of Regulations, Parts 110-113, or Title 33, Code of Federal Regulations Part 183, Sub-part I, Section 183.410, and the applicable requirements of the American Boat and Yacht Council, Inc. and/or ANSI/NFPA 302, “Fire Protection Standard for Pleasure and Commercial Motor Craft.”

II. INSTALLATION.

A. *Unpacking.*



Damaged globes can lead to explosions, which could result in serious injury or death.

After unpacking the unit, examine it for damage that may have occurred in transit. If the equipment has been damaged, do not attempt to install or operate the unit. File a claim immediately with the carrier, stating the extent of damage. Carefully check all envelopes, shipping labels and tags before removing or destroying them.

B. *Mounting.*

The Model FSEX-HI, strobes are designed for hearing impaired applications and should be installed per the NFPA 70 and 72, STATE and LOCAL CODES. Alternate installation locations and/or orientations should only be performed with the approval of the authority having jurisdiction. Reference Figure 1 for the light dispersion pattern of the FSEX-HI.

1. Optional Ceiling Mount.

2. Optional Wall Mount.

C. *Electrical Connections.*



To avoid electrical shock hazards, do not connect wires when power is applied.

The DC Model's Operating Voltage Range Limits: 16 Vdc to 33 Vdc.



This product was only tested to its rated operating voltage range. It was not tested to 80% and 110% of these limits.

▲ CAUTION

The DC units are polarity sensitive, and **MAY BE DAMAGED** by incorrect electrical hookup. When connecting the DC strobe unit to the voltage supply lines, **POLARITY MUST BE OBSERVED**. In addition, damage will result if the voltage rating of the model is exceeded.

The FSEX-HI units are provided with four leads; two red and two black. To achieve electrical supervision, connect one red (+) lead to the positive side of the incoming power source and the other red (+) lead to the outgoing power source. Then connect one black (-) lead to the negative side of the incoming power source and the other black (-) lead to the negative side of the outgoing power source. If required by local building codes, connect the earth ground to the grounding screw located in the mounting hood. See figures 2, 3, 4 and 5 for additional information.

III. MAINTENANCE.

▲ WARNING

To prevent receiving an electrical shock, disconnect the fixture from the supply circuit and wait at least 5 minutes before opening.

High voltages are present inside the light assembly after disconnecting power.

▲ SAFETY MESSAGE TO MAINTENANCE PERSONNEL

Listed below are some important safety instructions and precautions you should follow:

- Read and understand all instructions before operating this system.
- Any maintenance to the light system must be done with the power turned off.
- Any maintenance to the light system must be performed by a trained electrician in accordance with all applicable national and local codes in the country of use.
- Never alter the unit in any manner. Safety of the unit may be compromised if additional openings or other alterations are made.
- The nameplate should not be obscured, it contains cautionary and/or other information of importance to maintenance personnel. Ensure the nameplate remains readable if the housing's exterior is painted.
- If dome is damaged in any way, it **MUST** be replaced.
- After performing any maintenance, test the light system to ensure that it is operating properly.

Failure to follow all safety precautions and instructions may result in property damage, serious injury, or death to you or others.

A. *Flash Tube Replacement.*

As strobe lights are used, the flash tubes begin to darken, causing the light output to decrease. This darkening is characteristic of flash tubes. The darkening will begin near the base of the tube and progress upward. In addition, as flash tubes age, they may have a tendency to misfire (not fire periodically).

After extended operation, occasionally check for flash tube degradation. Should the flash tube misfire, have a noticeable decrease in light output, glow continuously or darken to a point beyond that shown in Figure 6, replace the flash tube.



High voltages are present inside the light assembly. Wait at least 5 minutes after shutting off the power before servicing this unit.

To change the flash tube, proceed as follows:

1. Disconnect power.
2. Loosen the setscrew located on the globe and holder assembly.
3. Remove the globe-and-holder assembly from the main casting by rotating the globe counterclockwise. If the globe assembly will not unscrew, back out the setscrew a few additional turns.



Effectiveness of explosion-proof enclosure must be maintained. Do not damage globe or threads while disassembling or reassembling unit. Lubricated joints exposed for long periods of time may attract small particles of dirt or other foreign materials. Body and cover joints should be reassembled immediately.

4. Loosen the dome clip screw (1 to 3 turns) and rotate the clip 90°. Remove the dome to expose the flash tube.
5. With the dome removed, gently pull the flash tube from its socket. A rocking motion is most helpful when installing or removing the tube.
6. Replace flash tube with the appropriated replacement part listed in part listed in paragraph III. E. Replacement Parts.
7. Place dome in position under hold down tabs (2). Rotate the clip into place on lip of dome and tighten the screw.

B. *Cleaning the Enclosure.*

NOTE

Maintenance procedures sometime require fixtures to be hosed down for good housekeeping. The circuit must be turned OFF and fixture globe MUST be allowed to cool to ambient room temperature before cleaning.

The fixture should be cleaned periodically to maintain maximum light output. Only mild, non-abrasive cleaning agents should be used. The glass globe should be regularly inspected for scratches and chips, and if damaged, must be replaced.

C. *Lubrication.*

Threaded joint on cover should be kept well lubricated with a corrosion-inhibiting grease such as petrolatum or soap-thickened mineral oils. If corrosive products have accumulated on explosion-proof joints and cannot readily be removed with solvents, the parts should be discarded and replaced.



Never use an abrasive material or file to remove corrosive products from threaded surfaces. In extremely corrosive locations, equipment should be periodically inspected to guard against unusual deterioration and possible porosity, since this may weaken the enclosure structurally.

D. *Service.*

The CPG factory will service your equipment and provide technical assistance with any problems that cannot be handled locally with satisfaction or promptness.

If any unit is returned to CPG for adjustment or repair, it can be accepted only if we are notified by mail or phone in advance of its arrival. Such notice should clearly indicate the service requested and give all pertinent information regarding the nature of the malfunction and, if possible, its cause.

Address all communications and shipments to:

Service Department
Commercial Products Group
2519 4th Avenue
Moline, IL 61265
800-521-8219

E. *Replacement Parts.*

Description	Part Number
Flash Tube	K8107159
Assembly, Globe	K8444C271-03
Pendant Fixture Mount	K8444A272-01
PCBA, Low-Inrush	K2001918-01
Mechanism, 24 Vdc	K8436107-04

F. *Optional Accessories.*

Description	Model
Ceiling Fixture Mount	CMXC-R
Wall Fixture Mount	WMXC-R


Table 1

Electrical Ratings	
Operational Voltage Range	16 Vdc-33 Vdc
On-Axis Candelas	150
Flashes/minute	63 ± 2
Frequency, Hz	DC
Max. DC Operating Current, A	1.9

Underwriters Laboratories only evaluated this product to the stated operational voltage range. It was not evaluated to 80% to 110% of the voltage range.

1


Model FSEX-HI Signaling Device for the Hearing Impaired Light Dispersion Pattern per UL1971.

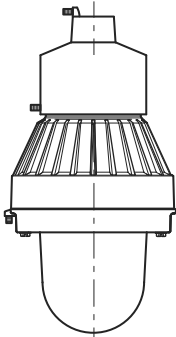

Horizontal Light Dispersion Pattern		
Degrees	Min. Output (cd) w/o Internal Lens	Min. Output (cd) w/ Internal Lens
0°	150.0	15.00
5-25°	135.0	13.50
30-45°	112.5	11.25
50°	82.5	8.25
55°	67.5	6.75
60°	60.0	6.00
65°	52.5	5.25
70°	52.5	5.25
75°	45.0	4.50
80°	45.0	4.50
85°	37.5	3.75
90°	37.5	3.75

290A6699

2

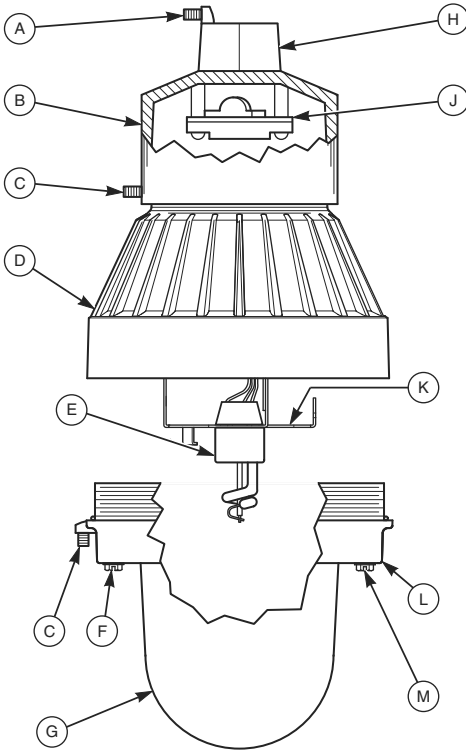


English

- A. Set screw
- B. Fixture mount
- C. Set screw
- D. Main housing
- E. Strobe flash tube
- F. Holder
- G. Globe
- H. 3/4" N.P.T. conduit
- I. Terminal block
- J. Mechanism assembly
- K. Globe and holder assembly
- L. Screws for securing globe guard

290A6700

3

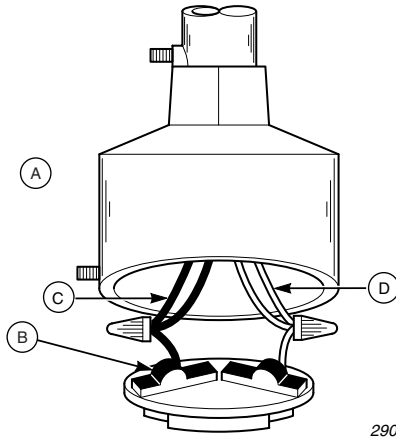


290A5322

English

- A. Not suitable for use with through branch circuit conductors.
- B. Terminal block
- C. Black Pair
- D. Red Pair

4

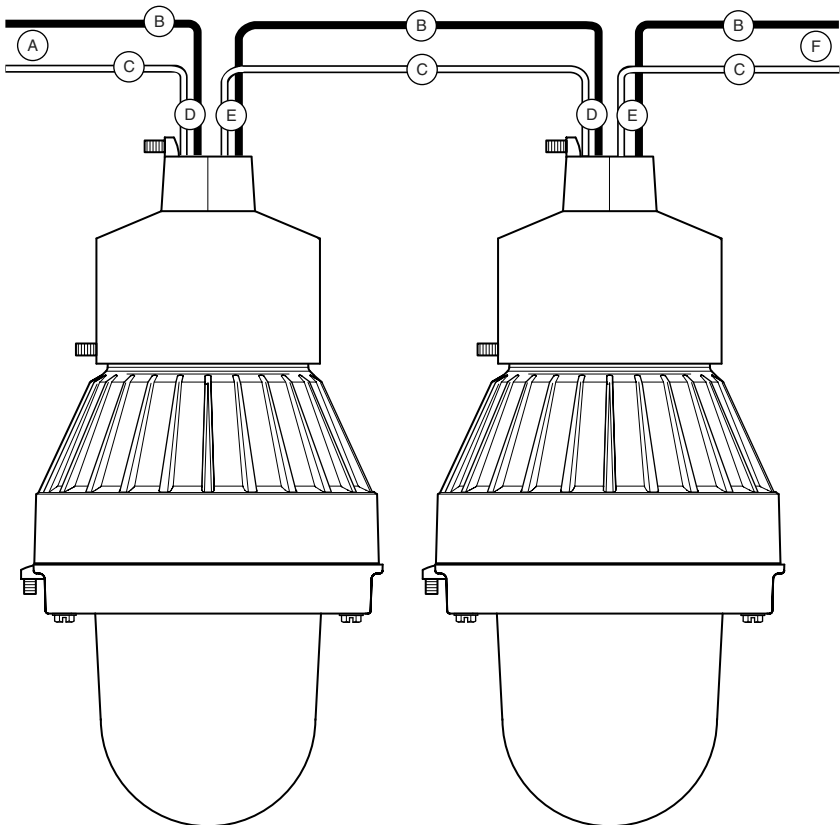

290A5323

English

A. 24 Vdc

B. Black


C. Red

D. In

E. Out

F. To next device

5

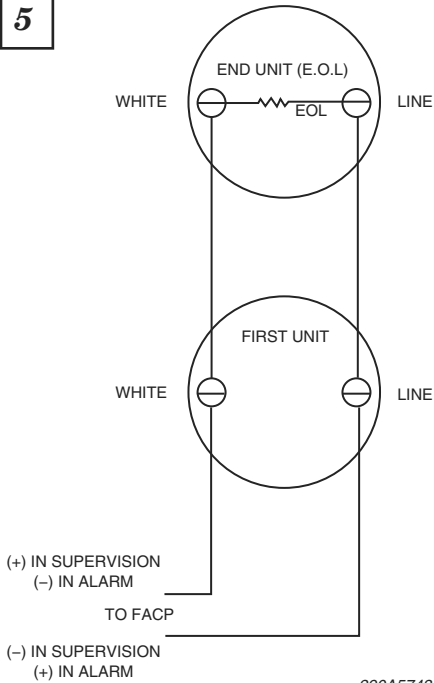

290A5743

FSEX STROBE (Series B1) INSTALLATION NOTE

First:

Determine polarity in the alarm state of your power source.

*Many FACPs and/or power sources are marked for polarity in supervision. Please refer to the FACP manual for correct polarity in alarm.



Second:

- Connect 24 Vdc (+) in alarm state to terminal marked "LINE" on the unit's hub.
- Connect 24 Vdc (-) in alarm state to terminal marked "WHITE".

This strobe provides a blocking diode for supervision.

Please call Commercial Products Group service at 800-577-5758 if you have further questions.

6

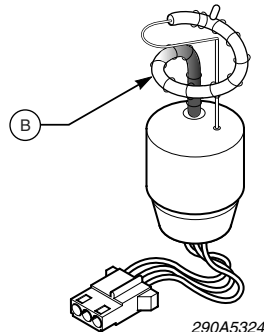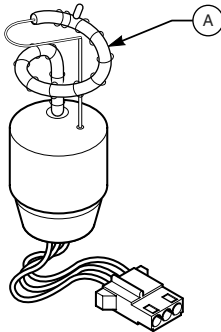

290A5324

English

A. New flash tube.

B. Used flash tube tends to discolor in areas shown, and should be replaced.